

# ENRESO WORLD - ILab

## Alternator

Connection diagram with different manufacturers

| VALO | DUCELLIER | MOTOROLA | PARIS - RHONE | SEV MARCHAL | BOSCH | DELCO - REMY | FEMSA   | FIAT | HITACHI | LUCAS | MAGNETTI - MARELLI | MITSUBUSCHI |   |
|------|-----------|----------|---------------|-------------|-------|--------------|---|------|---------|-------|--------------------|-------------|---|
| B+   | B+        | B-       | +             | B+          | B+    | +            |  | B+   | B       | +     |                    | +           |  |
| B-   | D-        | -        | M             | -           | D-    | GRD          | 31  | 31   | E/      | -     | 31                 | G           |  |
| EXC  | EXC       | EXC      | EXC           | DF          | DF    | F/           | EXC   | 67   | F/      | F/    | 67/                | F           |  |
| D+   | +R        | +        | 61+           | 61+         | D+    | +            | +   | 15   | IG      | +     | 15                 | IND         |  |
| D+   | IND/L     | D+       | +A/L          |             | D+    | D+           | L   |      | L       | IND   |                    | IND         |  |
| W    |           | W        | R             |             | W     |              |  |      |         | STA   |                    |             |   |